



External SLOT Caddy Setup


Polarization keys
on the same side
of the cable

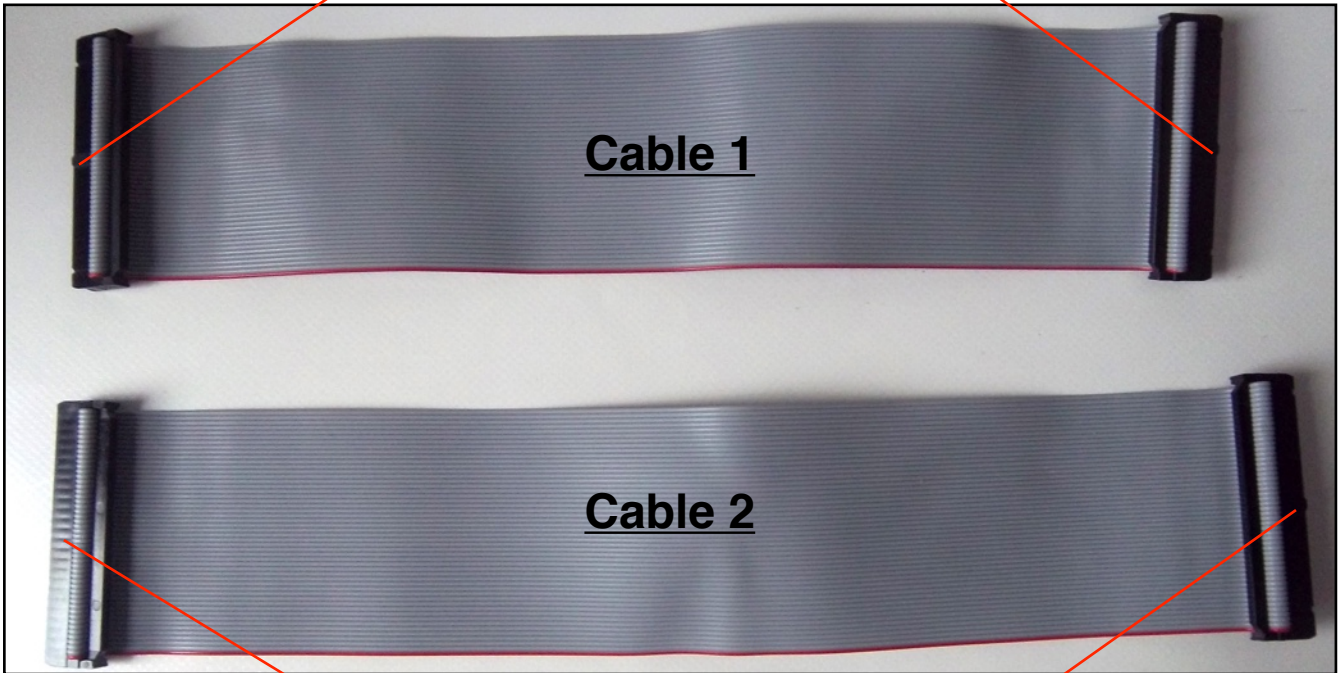

Polarization keys
on the opposite sides
of the cable

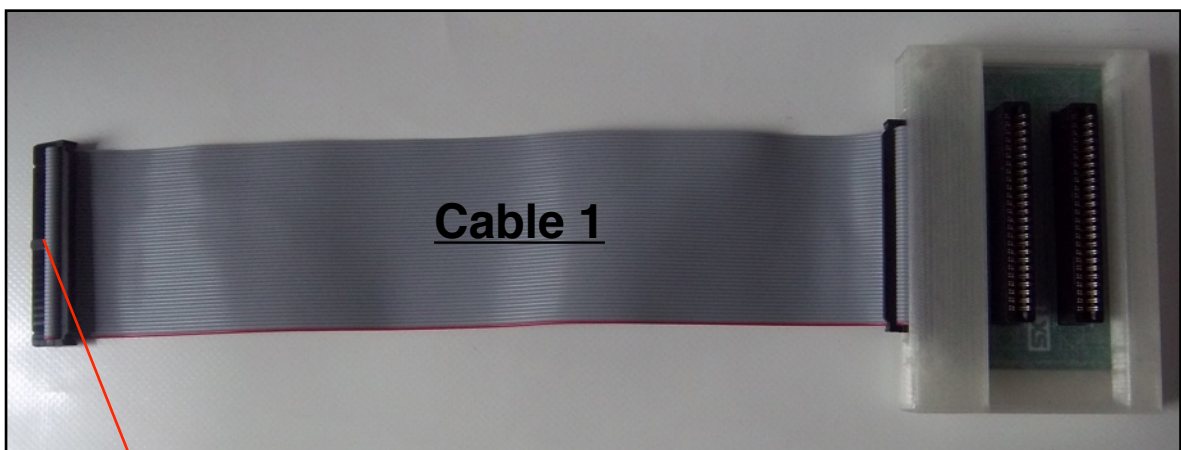


Polarization key
facing up

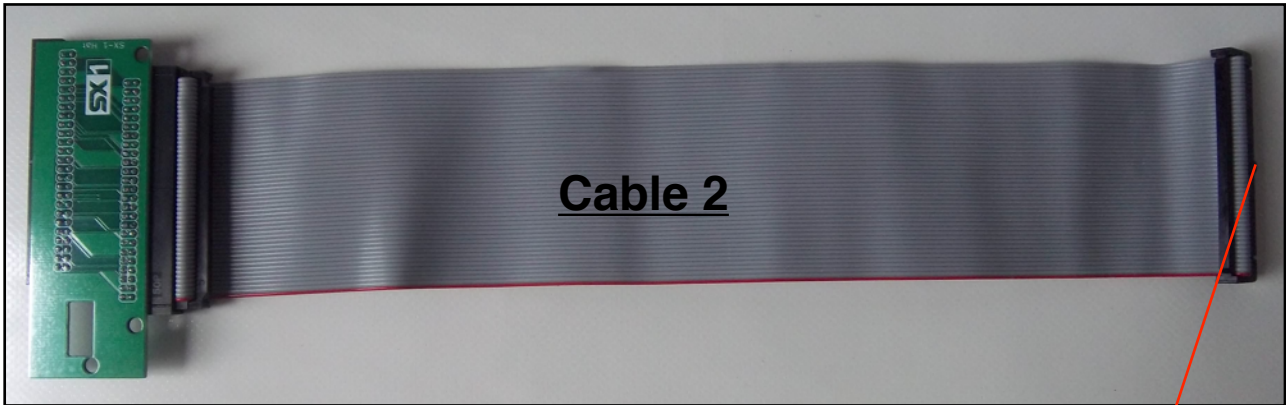

Cable 2

Polarization key
facing up

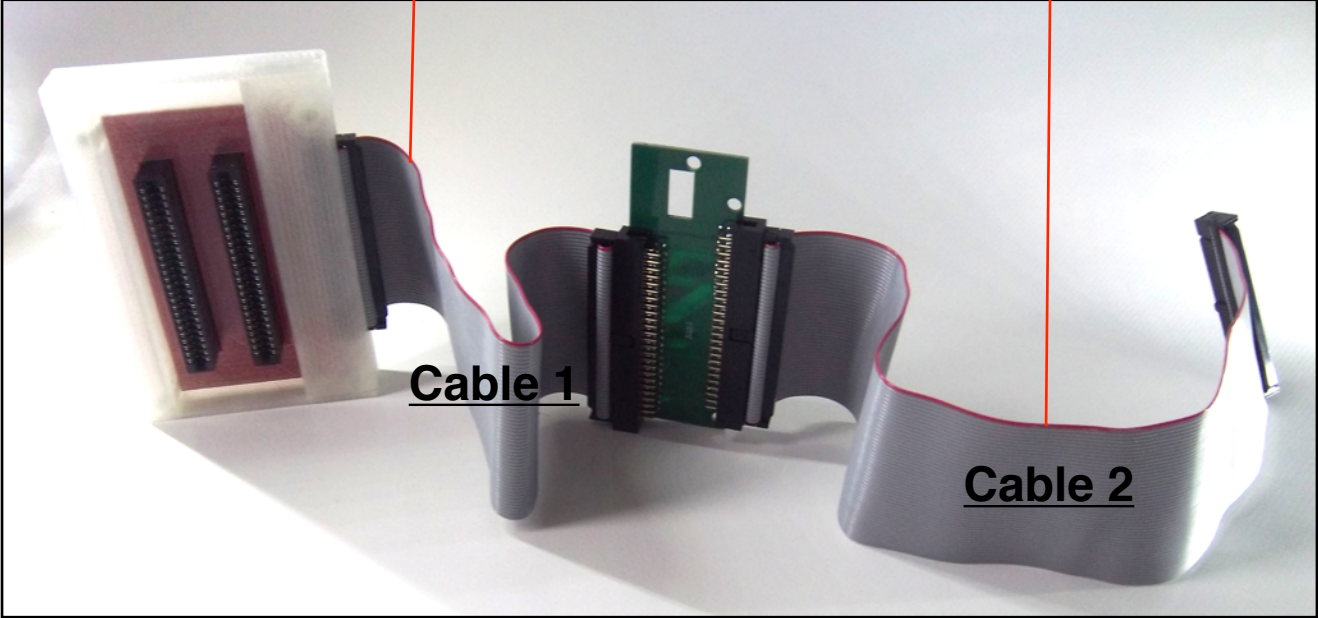


Wire 1 (RED)

Wire 1 (RED)


Cable 1

Cable 2

Use three 25mm standoffs to fix the hat

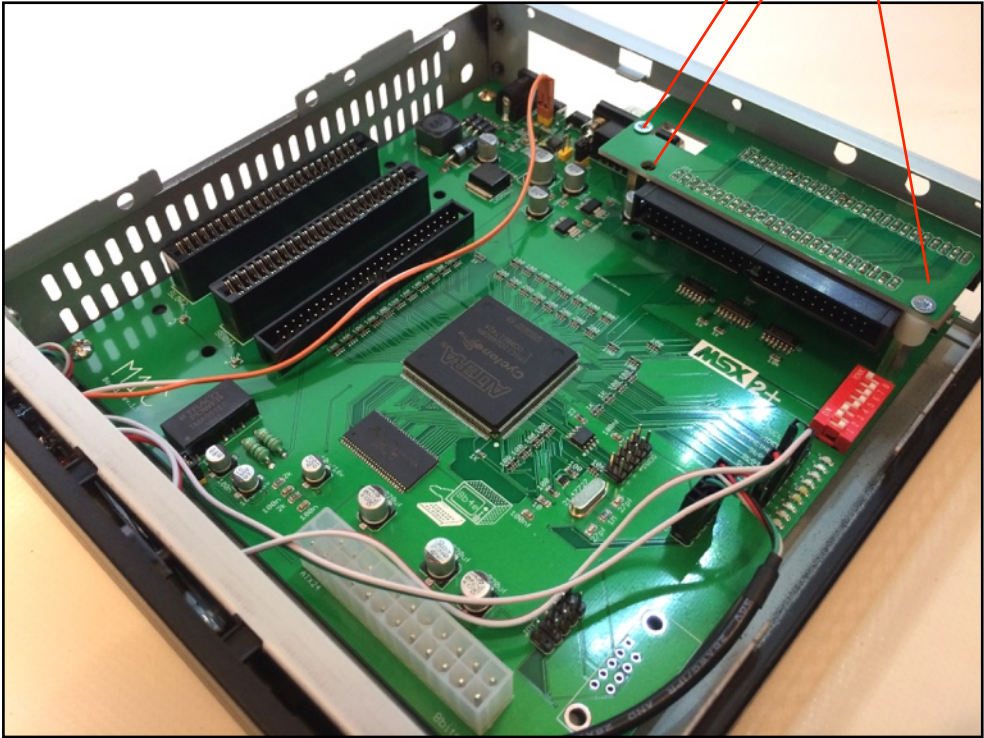


Wire 1 (RED)

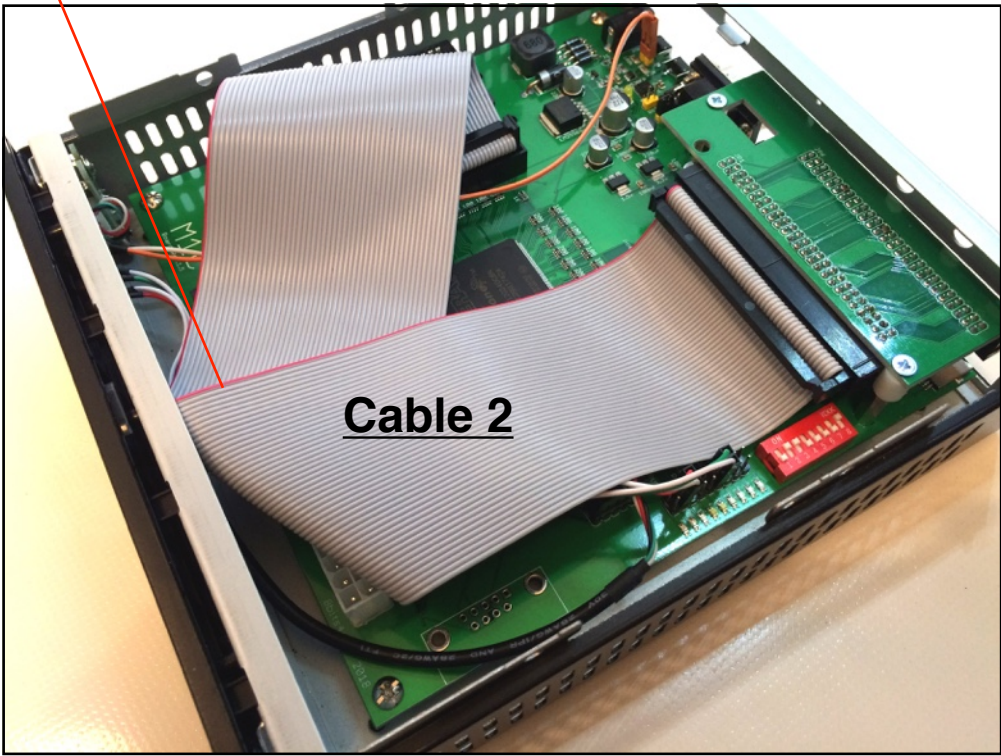

Cable 2

Wire 1 (RED)

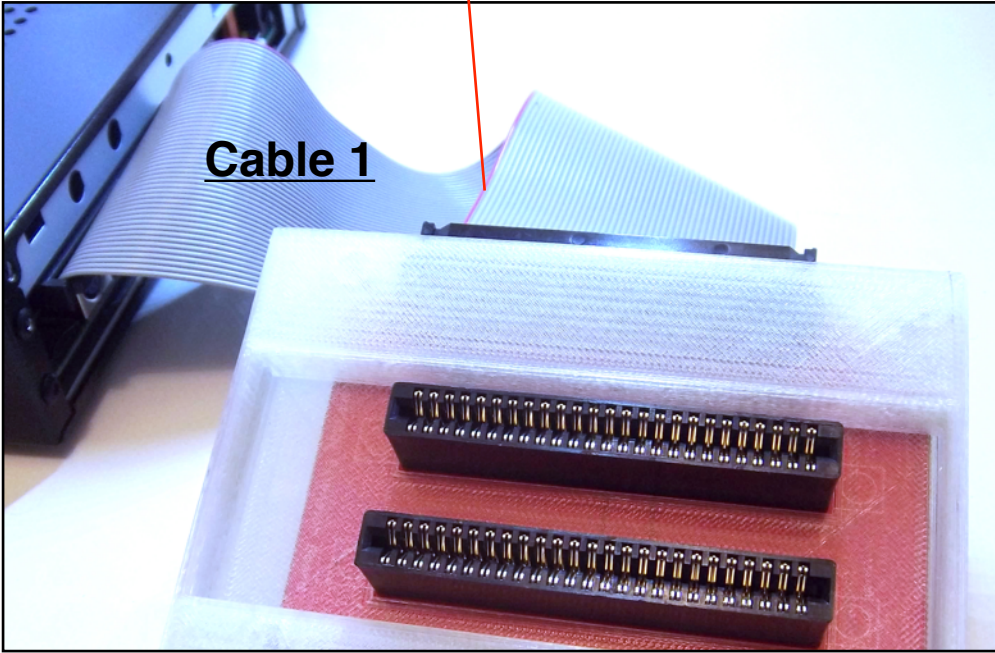

Cable 1