

Service  
Service  
Service



41 834 A12

# Service Manual

## SPECIFICATIONS

### MUSIC MODULE NMS1205

#### FM Sound Synthesizer

Features : 9 tones or  
: 6 melodies simultaneous  
: 5 rhythms  
: Vibrato  
: AM oscillators  
: 60 preset sounds

#### Sound sampler

Sampling method : 4 bit ADPCM  
Sampling freq. : 16 kHz  
Sampling time : 4 seconds at 16 kHz  
Sample memory : 256K x 1 bit

#### Sound processor

MSX Audio processor : Y8950

#### MIDI Interface

Data transfer rate : 31.25 kBd asynchronous  
communication  
Current loop : 5mA  
MIDI connections : MIDI IN/OUT/THRU  
MIDI connectors : DIN 5-pin 180°

#### Microphone

Internal microphone : Electret condensor  
Frequency range : 20 Hz tot 20 kHz

#### Ext. microphone

Connector : Cinch plug  
Input impedance : < 50 kOhm  
Input level : 2 mV to 800 mV p/p

#### Audio input

Connector : Cinch plug  
Input impedance : 50 kOhm  
Input level : 1 V p/p

#### Audio outputs

Connectors : 2 Cinch plugs  
Output impedance : 50 kOhm  
Output level : 200 mV p/p

#### Ext. keyboard

Connector : 20 pole socket

#### Power supply

Power Source : +12 V 30 mA typ.  
: -12 V 16 mA typ.  
: +5 V 200 mA typ.  
: MSX computer

#### Dimensions


(l x w x h) : 185 x 136 x 32 mm

### MUSIC KEYBOARD NMS1160

Number of keys : 61  
Interface plug : 20 pole female  
Cable length : 1.2 m  
Dimensions (l x w x h) : 898 x 185 x 69 mm

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified be used.

EXPLODED VIEW

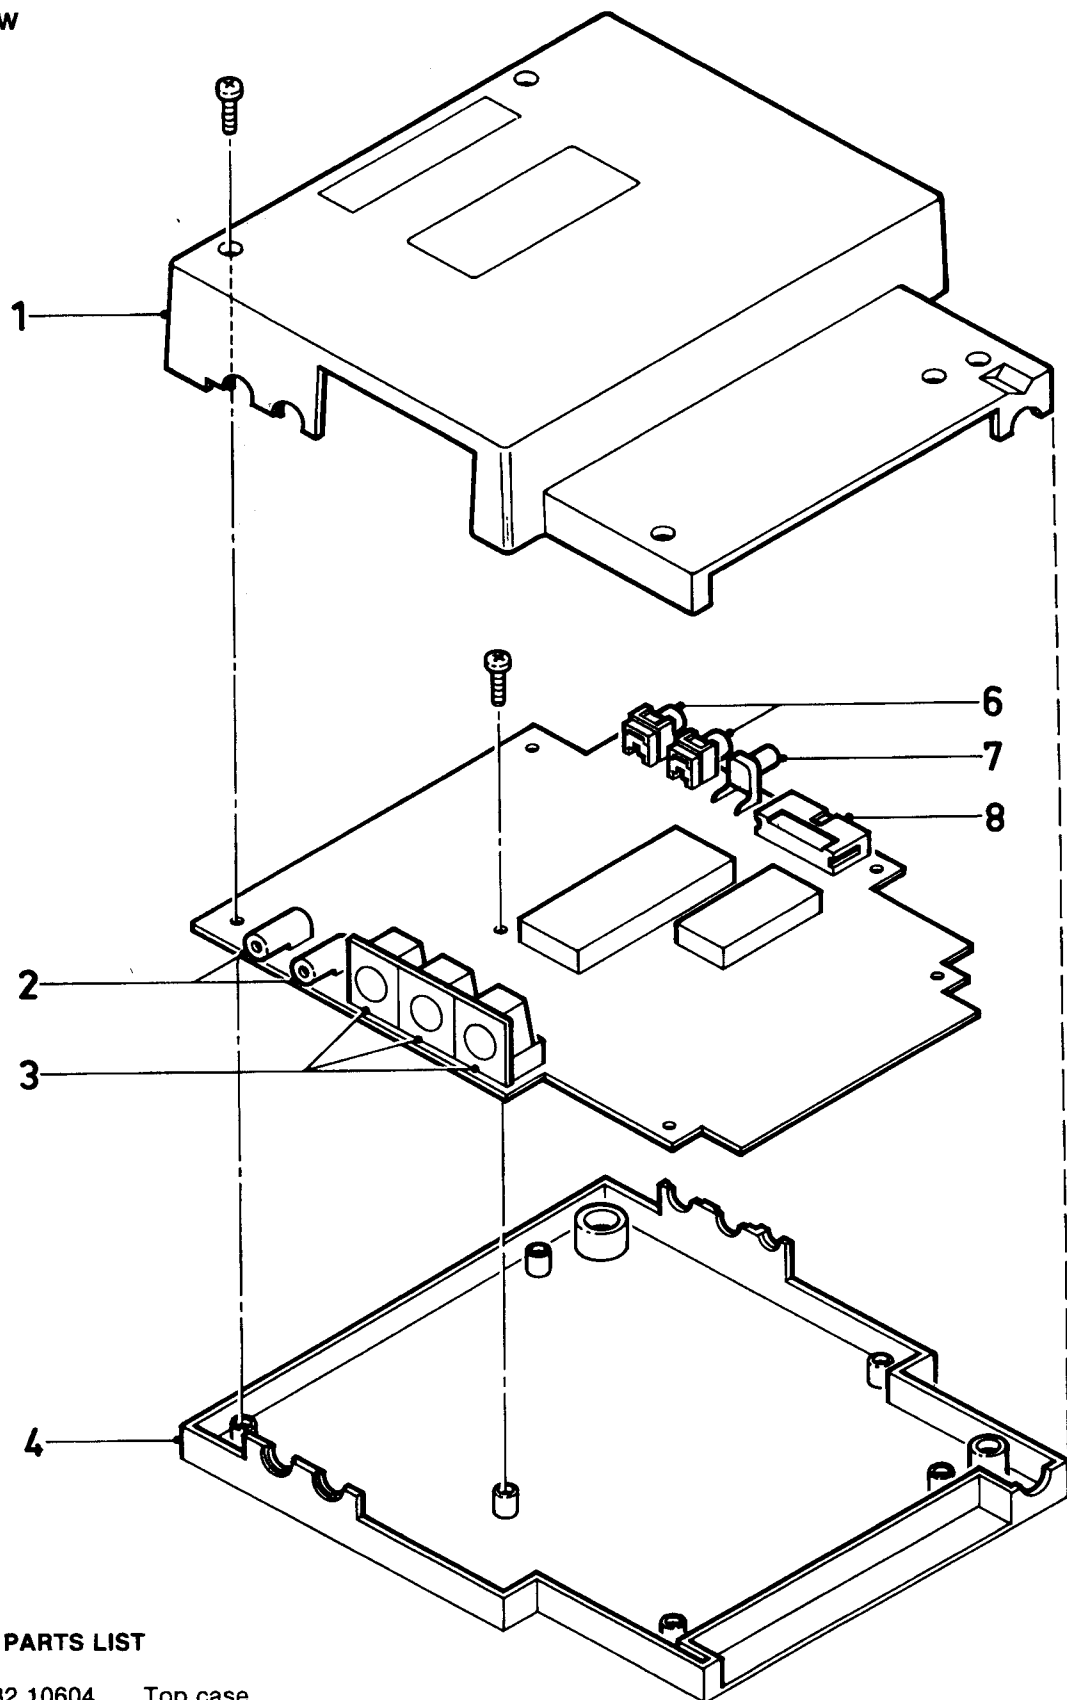


MECHANICAL PARTS LIST

|   |                |                           |
|---|----------------|---------------------------|
| 1 | 4822 432 10604 | Top case                  |
| 2 | 4822 267 30821 | OUT1 CINCH conn.          |
| 2 | 4822 267 30821 | OUT2 CINCH conn.          |
| 3 | 4822 256 30523 | MIDI OUT DIN 5P/1800 PCB  |
| 3 | 4822 256 30523 | MIDI IN DIN 5P/180° PCB   |
| 3 | 4822 256 30523 | MIDI THRU DIN 5P/180° PCB |
| 4 | 4822 432 10605 | Bottom case               |
| 6 | 4822 267 30819 | EXTM switched CINCH conn. |
| 6 | 4822 267 30819 | LINE switched CINCH conn. |
| 7 | 4822 100 11159 | VOL potmeter 10K          |
| 8 | 4822 290 60668 | KEYB connector 20P        |

42 051 C12

**BLOCK DIAGRAM**

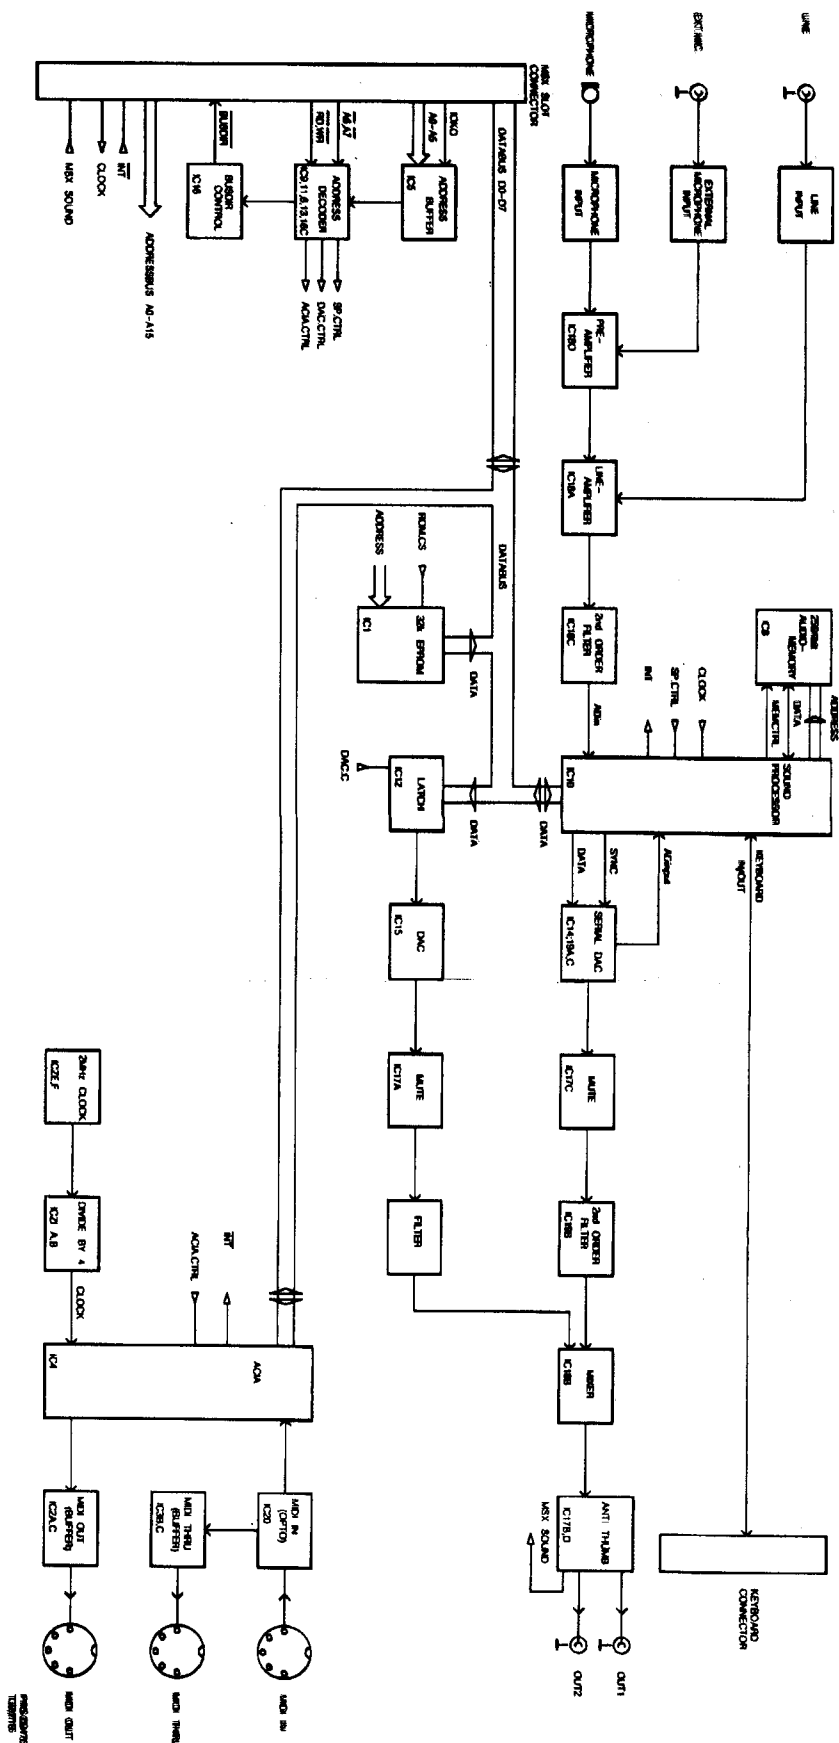

## ATTENTION

The exchange of cartridges should take place with the set turned off.

### ESD



All ICs and many other semi-conductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically.

When repairing, make sure that you are connected with the same potential as the mass of the set via a wrist wrap with resistance.

Keep components and tools also at this potential.

## INTRODUCTION

The Philips Music Module is a self-contained musical add-on to MSX and MSX-2 computer. It provides the possibility to generate, process or sample almost any sound. The Music Module also provides a Musical Instrument Digital Interface (MIDI) which makes it possible to connect the module to other electronic musical devices provided that they are equipped with such an interface too.

## TECHNICAL DESCRIPTION

The heart of the Music Module is the Yamaha Y8950 MSX Audio chip. This chip is both capable of signal sampling and of generating up to 9 simultaneous channels of frequency modulated audio sounds. The MSX Audio chip also has ports for keyboard-scanning. A line to the Z80 INT is provided.

The (digital) signal output is being fed to a Digital to Analog converter, the YM3014, which converts 10-bit serial information to an audio signal. This DA-converter is also used in the Analog to Digital conversion process.

The sample information is being stored in an external 256k x 1 memory-chip, the TMS4256 dynamic RAM.

An additional DA-converter, the DAC0800, is included to enable real time sound effects to be done.

The MIDI-interface consists of the MC6850-ic, an Asynchronous Communications Interface Adapter (ACIA) from the 6800-series.

All of the system software including the autostart routines is included on a 32K byte EPROM (27256).

For more information see the block diagram and the circuit diagram.

## CIRCUIT DESCRIPTION

### Input circuit

The analog input circuitry is built around 3 out of the 4 OPAMPS contained within IC18 (TL074). The first part of the circuit consists of the electret microphone's DC power supply; the signal then feeding into a variable gain ( $\times 3.. \times 100$ ) non inverting preamplifier. An external microphone facility is provided by the use of switched input socket 1. The signal is now further amplified by a factor of 6 before entering the anti aliasing filter, implemented around an OPAMP with a second order Butterworth response with a  $-3$  dB point of 6 kHz. The resistor network R8, R29, VR1 provides the DC bias. Diodes D5, D6 provide overload protection to prevent damage to the MSX Audio chip.

### Digital to Analog converters

IC14 is a 13 bit DA-converter. It has a serial input. It is connected to the MSX Audio chip with 3 lines: a serial link, a clock line and a synchronising line. The converted output is fed to a unity gain buffer (IC19-LM342) and back to the MSX Audio chip for Analog to Digital conversion purposes. Pin 7 of IC14 outputs a reference voltage of  $1/2 V_{dd}$  which is buffered by IC19 and is used as a DC bias for various points in the output circuit.

IC15 is a 8 bit DA-converter used when the circuit is used in the ECHO and PITH SHIFTER modes. This DA converter is of the DAC0800 type and is buffered by IC1 for inputs and by IC19 for outputs.

### Output circuits

The outputs of both DA converters enter analog switches. They are controlled by the MSX Audio chip multi-purpose I/O ports and are thus under software control. IC19 provides a 16 kHz second order Butterworth response to smooth out higher harmonics. IC18 acts to mix both outputs before they enter the anti thumb circuit which delays the connection of the signal for about 1 second after power up. This is to avoid the 2.5 V bias level to appear immediately on the output causing a click. The output is also fed into the MSX computer in order to make the sound audible on a TV or Video monitor.

### MIDI circuit


The MIDI interface is of an standard type (5 mA serial link operation at 31.5 kBaud, see diagram for transmission protocol) using the 6850 Asynchronous Communications Interface Adapter (ACIA) chip. The Opto Isolator used is type PC900. The ACIA clock circuit utilizes a 2 MHz crystal in the feedback loop of two 'linearized' TTL inverters. A divide by 4 circuit constructed of 2 D-type flipflops is used to reduce this to the correct ACIA operating frequency. As the ACIA used is of the 6800-series the required enable control signal has to be generated by ANDing the Z80 Read and Write control lines. The Z80 INT is connected to the ACIA.

### Address decoding


The address decoding used is standard, being performed by IC6, IC9, IC11, IC13 and IC16. A block diagram of the decoding, completed with port decoding used is included in the manual.

Note that IC16 has open collector outputs to be used to drive the MSX BUSDIR signal. The address lines are buffered by IC5, in conformity with the MSX specifications.

PCB-LAYOUT

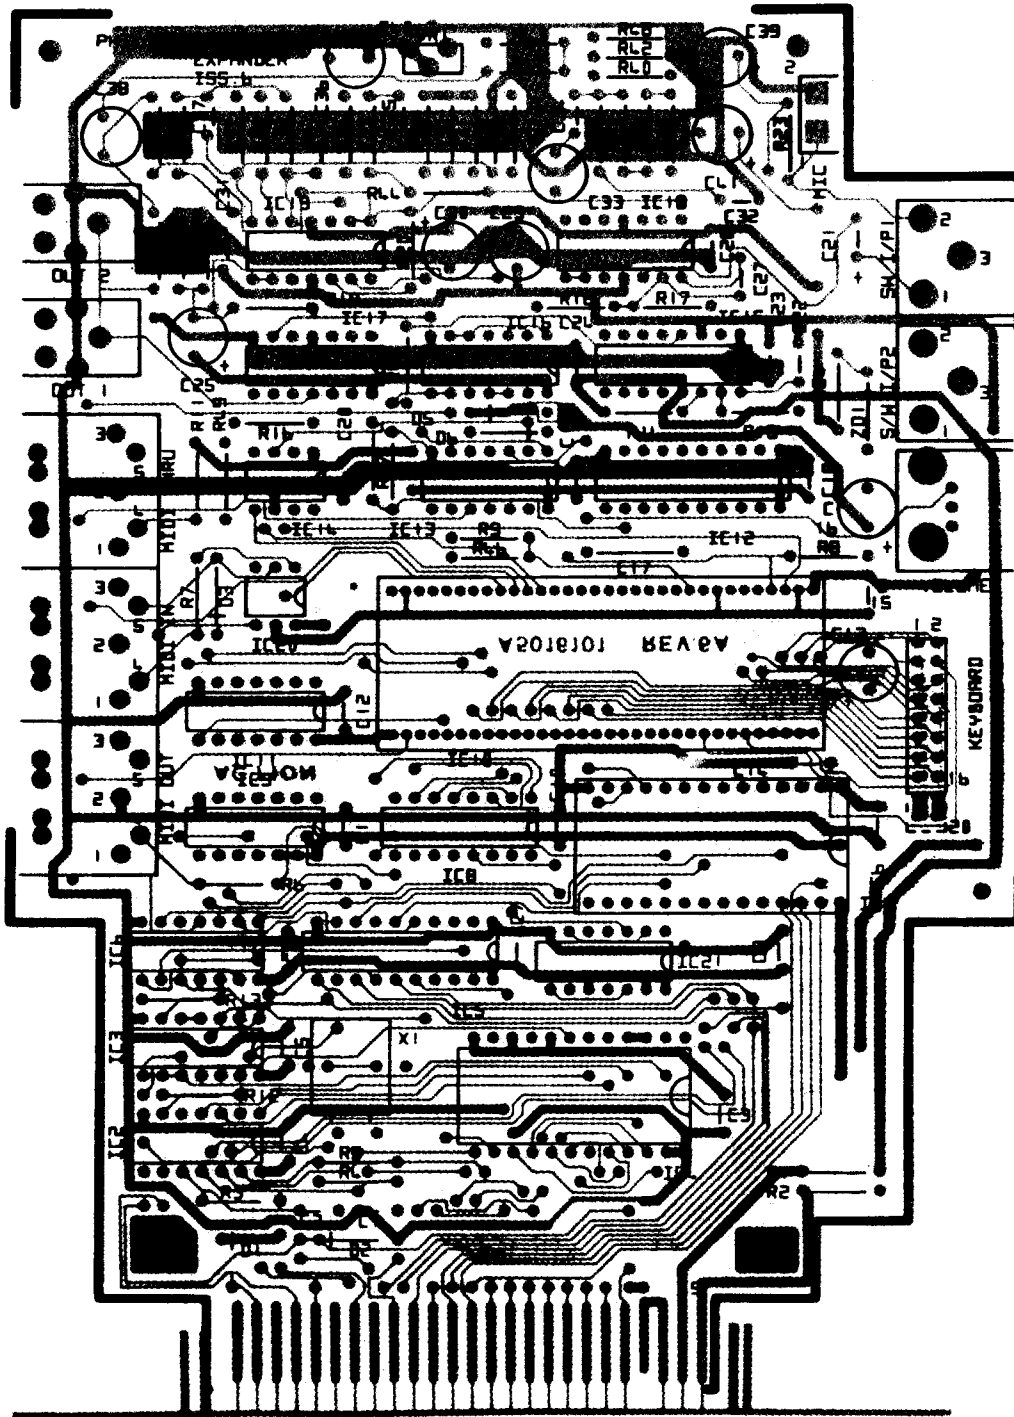
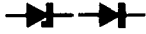



CIRCUIT DIAGRAM

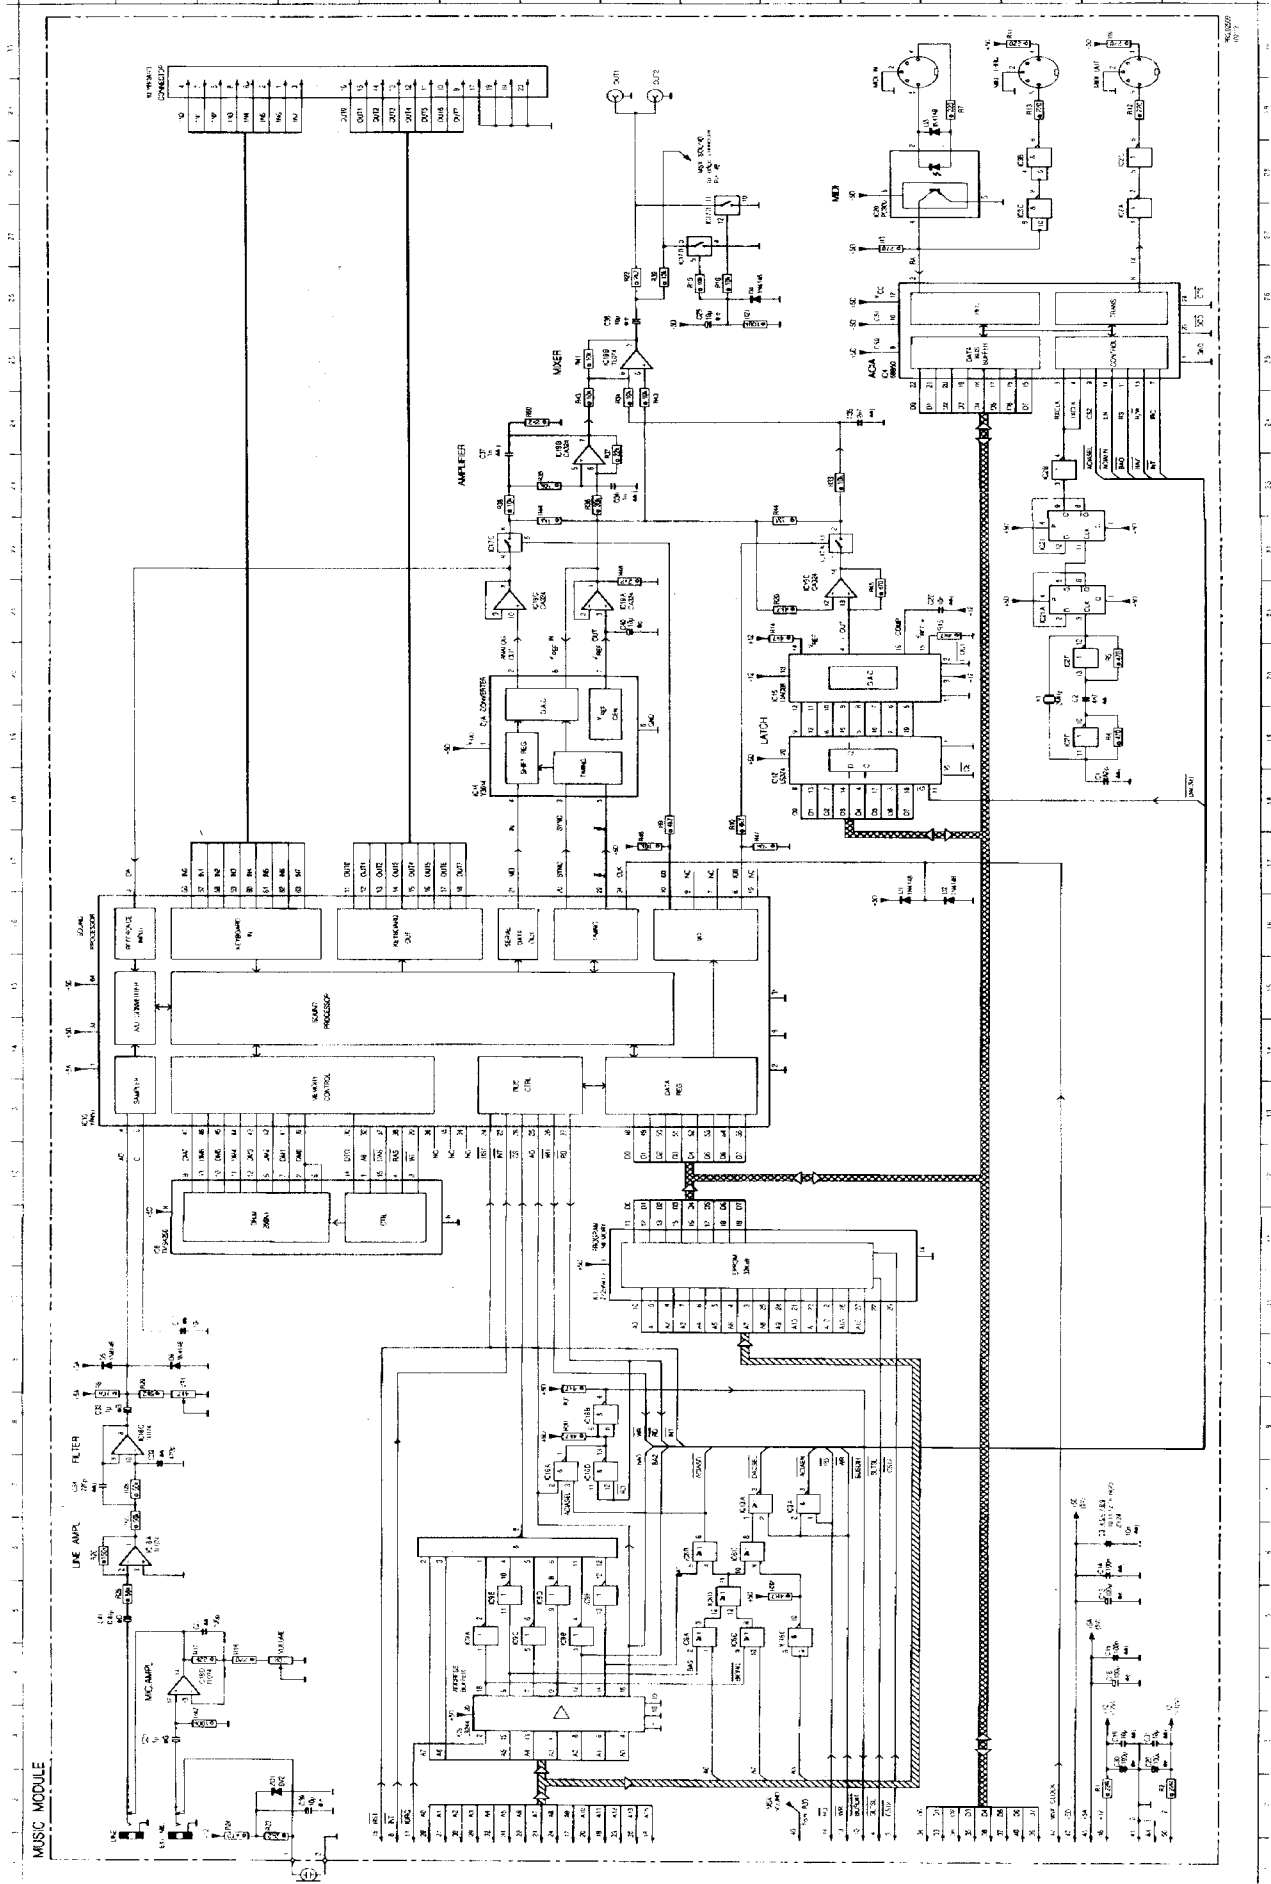


100 101 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137 138 139 140 141 142 143 144 145 146 147 148 149 150 151 152 153 154 155 156 157 158 159 160 161 162 163 164 165 166 167 168 169 170 171 172 173 174 175 176 177 178 179 180 181 182 183 184 185 186 187 188 189 190 191 192 193 194 195 196 197 198 199 200 201 202 203 204 205 206 207 208 209 210 211 212 213 214 215 216 217 218 219 220 221 222 223 224 225 226 227 228 229 230 231 232 233 234 235 236 237 238 239 240 241 242 243 244 245 246 247 248 249 250 251 252 253 254 255 256 257 258 259 260 261 262 263 264 265 266 267 268 269 270 271 272 273 274 275 276 277 278 279 280 281 282 283 284 285 286 287 288 289 290 291 292 293 294 295 296 297 298 299 300 301 302 303 304 305 306 307 308 309 310 311 312 313 314 315 316 317 318 319 320 321 322 323 324 325 326 327 328 329 330 331 332 333 334 335 336 337 338 339 340 341 342 343 344 345 346 347 348 349 350 351 352 353 354 355 356 357 358 359 360 361 362 363 364 365 366 367 368 369 370 371 372 373 374 375 376 377 378 379 380 381 382 383 384 385 386 387 388 389 390 391 392 393 394 395 396 397 398 399 400 401 402 403 404 405 406 407 408 409 410 411 412 413 414 415 416 417 418 419 420 421 422 423 424 425 426 427 428 429 430 431 432 433 434 435 436 437 438 439 440 441 442 443 444 445 446 447 448 449 450 451 452 453 454 455 456 457 458 459 460 461 462 463 464 465 466 467 468 469 470 471 472 473 474 475 476 477 478 479 480 481 482 483 484 485 486 487 488 489 490 491 492 493 494 495 496 497 498 499 500 501 502 503 504 505 506 507 508 509 510 511 512 513 514 515 516 517 518 519 520 521 522 523 524 525 526 527 528 529 530 531 532 533 534 535 536 537 538 539 540 541 542 543 544 545 546 547 548 549 550 551 552 553 554 555 556 557 558 559 560 561 562 563 564 565 566 567 568 569 570 571 572 573 574 575 576 577 578 579 580 581 582 583 584 585 586 587 588 589 590 591 592 593 594 595 596 597 598 599 600 601 602 603 604 605 606 607 608 609 610 611 612 613 614 615 616 617 618 619 620 621 622 623 624 625 626 627 628 629 630 631 632 633 634 635 636 637 638 639 640 641 642 643 644 645 646 647 648 649 650 651 652 653 654 655 656 657 658 659 660 661 662 663 664 665 666 667 668 669 670 671 672 673 674 675 676 677 678 679 680 681 682 683 684 685 686 687 688 689 690 691 692 693 694 695 696 697 698 699 700 701 702 703 704 705 706 707 708 709 710 711 712 713 714 715 716 717 718 719 720 721 722 723 724 725 726 727 728 729 730 731 732 733 734 735 736 737 738 739 740 741 742 743 744 745 746 747 748 749 750 751 752 753 754 755 756 757 758 759 760 761 762 763 764 765 766 767 768 769 770 771 772 773 774 775 776 777 778 779 780 781 782 783 784 785 786 787 788 789 790 791 792 793 794 795 796 797 798 799 800 801 802 803 804 805 806 807 808 809 810 811 812 813 814 815 816 817 818 819 820 821 822 823 824 825 826 827 828 829 830 831 832 833 834 835 836 837 838 839 840 841 842 843 844 845 846 847 848 849 850 851 852 853 854 855 856 857 858 859 860 861 862 863 864 865 866 867 868 869 870 871 872 873 874 875 876 877 878 879 880 881 882 883 884 885 886 887 888 889 890 891 892 893 894 895 896 897 898 899 900 901 902 903 904 905 906 907 908 909 910 911 912 913 914 915 916 917 918 919 920 921 922 923 924 925 926 927 928 929 930 931 932 933 934 935 936 937 938 939 940 941 942 943 944 945 946 947 948 949 950 951 952 953 954 955 956 957 958 959 960 961 962 963 964 965 966 967 968 969 970 971 972 973 974 975 976 977 978 979 980 981 982 983 984 985 986 987 988 989 990 991 992 993 994 995 996 997 998 999 1000

**ELECTRICAL PARTS LIST MUSIC MODULE**


|   |                |                     |
|---|----------------|---------------------|
|    |                |                     |
| IC1   | 4822 209 51254 | UPD27256D-25 V1.2   |
| IC2   | 5322 209 81625 | 74LS04N             |
| IC3   | 5322 209 81623 | 74LS00N             |
| IC4   | 4822 209 71624 | 68B50P              |
| IC5   | 5322 209 86017 | HD74LS244           |
| IC6   | 5322 209 81634 | HD74LS32            |
| IC8   | 4822 209 51255 | 4256-15             |
| IC9   | 5322 209 81625 | 74LS04N             |
| IC10  | 4822 209 71622 | Y8950               |
| IC11  | 4822 209 83428 | HD74LS30            |
| IC12  | 5322 209 81646 | HD74LS374           |
| IC13  | 5322 209 81634 | HD74LS32            |
| IC14  | 4822 209 71623 | Y3014               |
| IC15  | 5322 209 11254 | DAC08/E             |
| IC16  | 5322 209 85703 | 74LS01N             |
| IC17  | 5322 209 10357 | HEF4066BP           |
| IC18  | 5322 209 83581 | TL074CN             |
| IC19  | 4822 209 71621 | CA324E              |
| IC20  | 4822 130 10008 | PC900               |
| IC21  | 5322 209 81647 | HD74LS74N           |
|    |                |                     |
| ZD1   | 4822 130 34167 | BZY88C6V2           |
| D1  | 4822 130 30621 | 1N4148              |
| D2  | 4822 130 30621 | 1N4148              |
| D3  | 4822 130 30621 | 1N4148              |
| D4  | 4822 130 30621 | 1N4148              |
| D5  | 4822 130 30621 | 1N4148              |
| D6  | 4822 130 30621 | 1N4148              |
|  |                |                     |
| VR1   | 4822 100 11158 | TRIMPOT 4.7K VERT   |
| VOL   | 4822 100 11159 | TRIMPOT 10K TAPER C |
| <b>VARIOUS</b>  |                |                     |
| X1  | 4822 242 71723 | CRYSTAL 2.000MHz    |
| MIC   | 4822 242 30144 | ELECTRET MIKE       |

**ELECTRICAL PARTS LIST MUSIC KEYBOARD**


|   |                |        |
|---|----------------|--------|
|  |                |        |
|   | 4822 130 30621 | 1N4148 |

MUSIC KEYBOARD NMS1160

MINI-DIN  
CONNECTOR  
CABLE

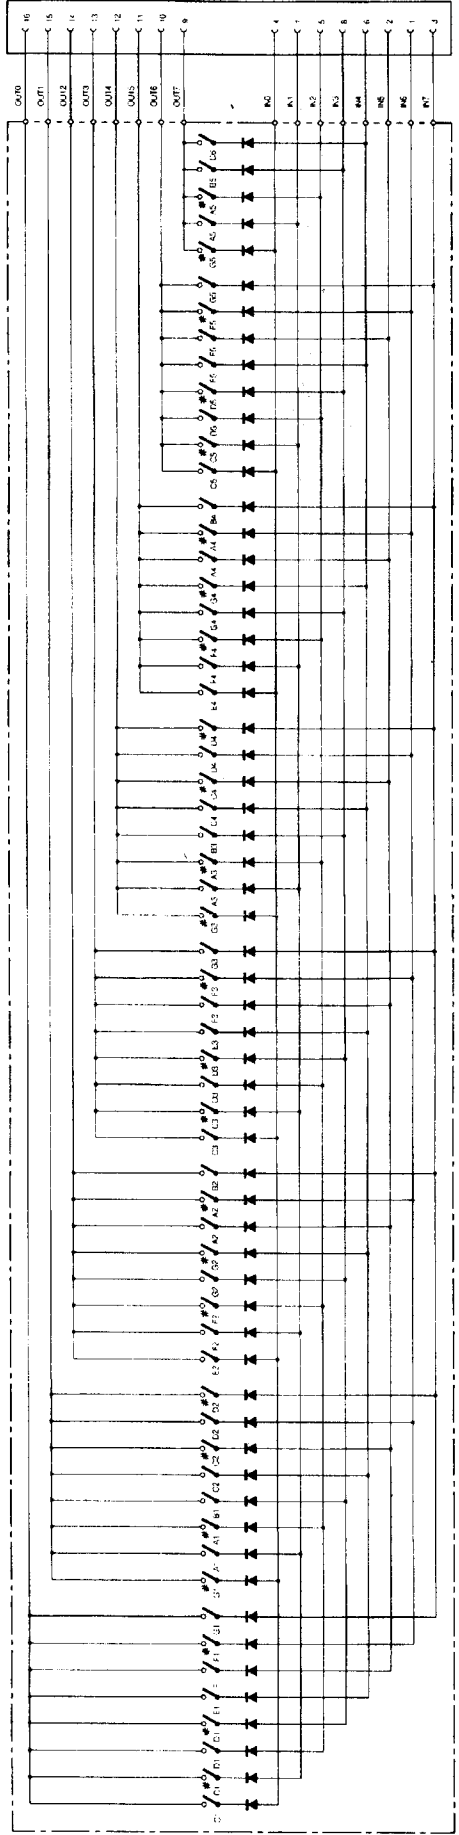

DATE: PHILIPS 19418

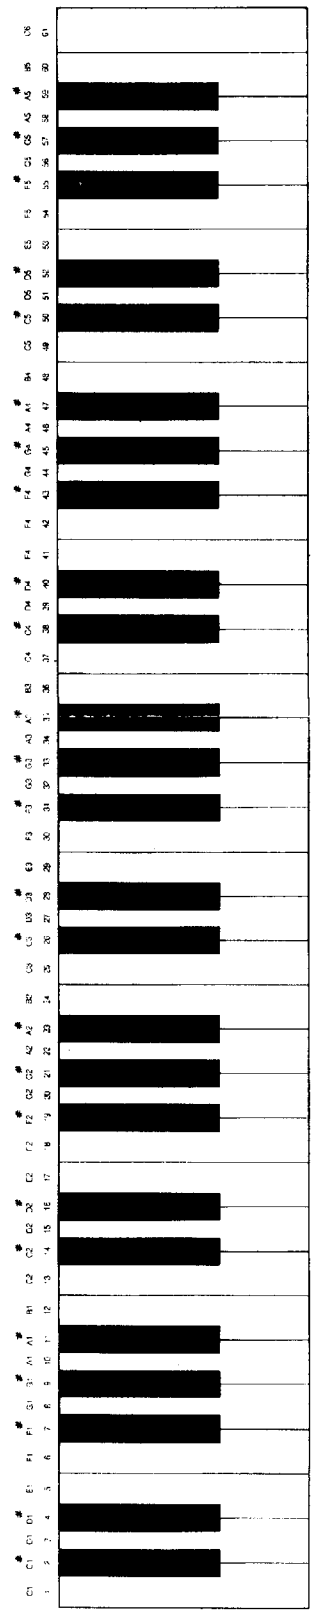

PHILIPS 19418



## REPAIR METHOD

To determine causes of errors follow the Symptom/Cure list stated below. For test 1 to 9 reference is made to the diagnostic program.

### Symptom:

Faulty start up or bad picture.

### Cure:

EPROM malfunction: run test 1 (Checksum).  
Check for bus errors.  
Check edge connector.

### Symptom:

Picture o.k. but no sound at all.

### Cure:

Select test 5 (Music chip).  
Select test 5-2 (Sinewave).

### Symptom:

No real time sound effects, no pitch shift in sample playback mode.

### Cure:

Select test 3 (DAC).  
If the signal does not appear at all, select test 8 (Signals test), to determine possible addressing errors. If no errors found, IC15 is defective. Otherwise IC19 may be defective.

### Symptom:

No sampling or faulty sampling.

### Cure:

Select test 5 (Musicchip).  
Select test 5-1 (9 notes).  
If 9 notes test does not respond correctly it may indicate a defective Audio chip IC10. Proceed as under 'no sound at all'.  
Select sample test.

### Symptom:

MIDI Interface does not work or does not work correctly.

### Cure:

Select test 2 (MIDI).  
Connect MIDI interface lead between MIDI IN socket and MIDI OUT socket.  
Select test 2-1 (ACIA).  
If an error occurs during ACIA test, check data lines and control lines on IC4. To check for addressing errors the program includes test signals which can be generated by selecting the 'signals' test 8.  
Select test 2 (MIDI).  
Select test 2-2 (180  $\mu$ s).

### Symptom:

Keyboard does not work correctly.

### Cure:

Select test 4 (Keyboard).

## ADJUSTMENTS

### VR1 Adjustment

Reference is made to Music Module Diagnostic Program test 7.

## DIAGNOSTIC PROGRAM USERS MANUAL

### Introduction

The diagnostic program provides a number of tests which makes it possible to determine causes of errors in the music module.

The program can also be used to test the Music Keyboard NMS 1160 using a Music Module.

The program requires:

- 1 A MSX computer system with at least 32 K RAM configuration.
- 2 An oscilloscope (15 MHz).
- 3 A keyboard testprint and/or a keyboard NMS 1160.
- 4 A MIDI connector lead  
(a 5 pin DIN record/play-lead can be used).
- 5 A short-circuited cinch plug.

The tools described are easily obtainable or can be easily constructed. Tools 3 to 5 are specified in figure 1 to 3.

The listing of the Diagnostic Program in MSX-BASIC is shown in Appendix A.

Type in the lines 10 to 2350 and save the program on tape or disc.

### List tester

Using the list-tester option.

To make sure that you have typed in the program correctly, lines 2500 to 5000 provide an easy way of checking.

To use it, add the (optional) lines 2500 to 5000 to the program. Type in RUN 2500 <return> to start the list-tester program.

On the screen the line numbers and the corresponding checksum of the line will appear. These have to match the checksums in the list of checksums (see appendix B). If not, check if there are errors in the line where the faulty checksum occurred.

The listtester will not test itself; Only lines up to 2500 will be checked.

Lines starting with REM statements will return 0 as a checksum regardless of the text after the statement. This text is optional.

The listtester ignores spaces in the program to allow you to format the program as you like.

### Test procedure

Before starting the test procedure we suggest a visual check for short-circuits, etc. on the PCB of the Music Module.

Insert the Music Module in slot 1 or 2 of a switched off MSX computer and switch on the computer.

#### Symptom:

MSX computer does not power up when Music Module is plugged in.

Probably short-circuit

- check IC power lines
- check edge connector
- check data lines and address lines

#### Note:

Data line errors will result in faulty start up of the computer.

#### Symptom:

Music Module does not start up correctly;  
Picture not correct.

- check EPROM IC1
- check edge connector

Before starting the Diagnostic program, switch off the computer, and check that the Music Module is well connected to slot 1 or 2.

Turn the computer back on while holding down the <ESC> key.

Load the Philips Music Module Diagnostics program and have it run by pressing the <F5> key.

The program will be showing its menu on the screen:

| Philips Music Module Diagnostics  |
|---|
| <ol style="list-style-type: none"><li>1. Checksum</li><li>2. MIDI</li><li>3. DAC</li><li>4. Keyboard</li><li>5. Music chip</li><li>6. Sample</li><li>7. VR1-Adjust</li><li>8. Signals</li><li>9. Start Module</li></ol> |
| Select one of above tests   |

DIAGNOSTIC PROGRAM TEST TOOLS DESCRIPTION

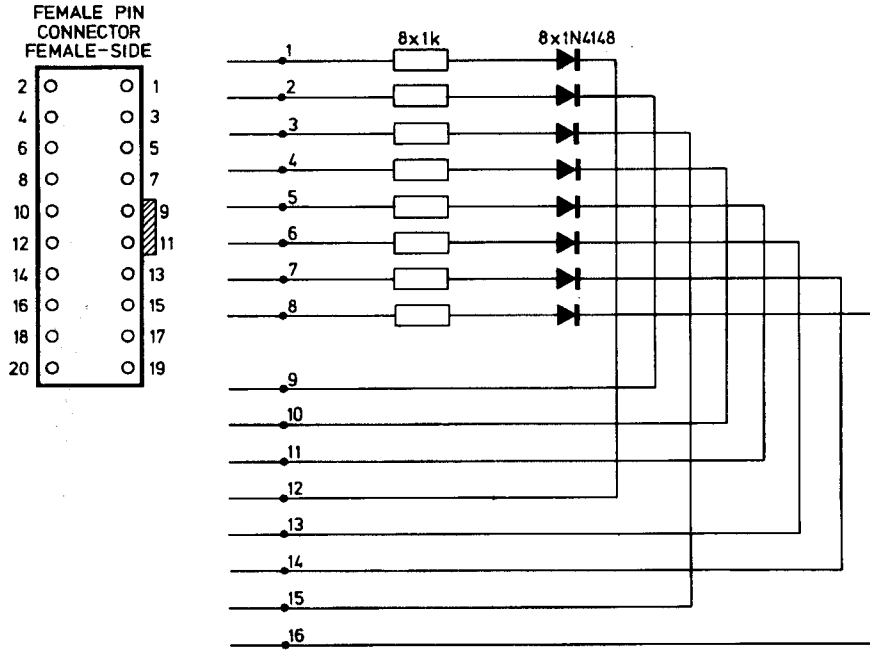


Fig. 1  
KEYBOARD TESTPRINT

42 056 B12

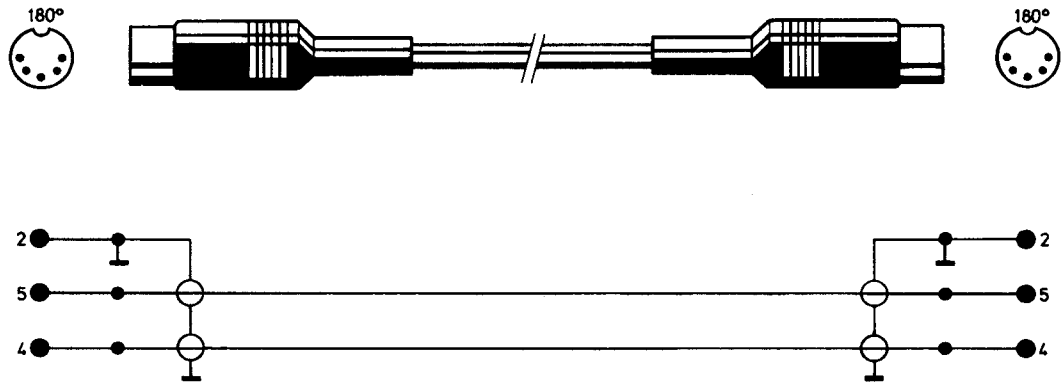


Fig. 2  
MIDI INTERFACE LEAD

42 055 B12

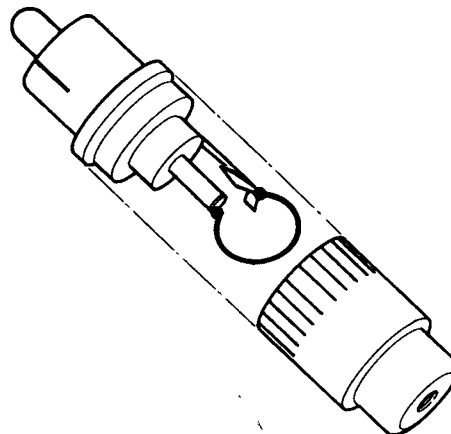


Fig. 3  
SHORT CIRCUITED CINCH PLUG

42 054 A12

## DESCRIPTION OF THE TESTS

### 1. Checksum

The Checksum test first will ask to which slot the Music Module is connected. Type in this information (usually 1 or 2) and hit the <RETURN>-key.

The program will return the checksum of the Music Module EPROM, which has to be DE54 for this version (UPD27256D-25 V1.2).

If not, the EPROM (IC1) is defective.

### 2. MIDI

The MIDI test checks the built in MIDI interface.

The test requires a MIDI Interface Lead (see fig 2).

After selecting the MIDI test the following menu will return:

1. ACIA test
2. Pulse test


The ACIA test will test automatically the MIDI Interface except IC3. (Test IC3 using the Pulse test).

First connect the MIDI OUT terminal with the MIDI IN terminal using the MIDI interface lead.

The test writes out bytes to the MIDI OUT terminal and reads them from the MIDI IN terminal at the same time.

The Pulse test will generate 180  $\mu$ s pulses (see fig. 4) on the MIDI OUT terminal (IC4 pin 6) and allows to check the interface buffers using an oscilloscope.

Check these pulses on:  
IC4 pin 6  
IC2 pin 6  
MIDI OUT pin 5

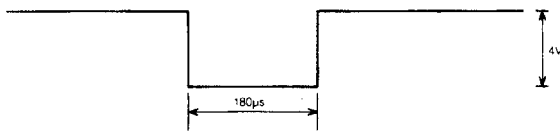

180 $\mu$  TEST RESPONSE ON MIDI OUT PIN 5

Fig. 4

PRS 02537  
T02/727

Connect the interface lead and check the pulses on IC20 pin 2,4.

If the pulses appear on pin 2 but not on pin 4 IC20 is defective.

Check the pulses on IC3 pin 6. IC3 may be defective.


If no pulses are detected at all and data and control lines show no errors:

- Check the clock generator.
  - Look for 2 MHz on IC2 pin 12. If not present, the cause may be X1 or IC2.
  - Look for 1 MHz on IC21 pin 11, 5.
  - Look for 0.5 MHz on IC21 pin 9. If the signal is not present, IC21 will have to be replaced.
  - Look for 0.5 MHz on IC2 pin 3, 4. If the signal is not present, IC2 will have to be replaced.
  - Look for pulses on IC3 pin 3. If there are none, IC3 is probably defective.
- Otherwise IC4 needs replacement.

### 3. DAC

The DAC test allows to check the 8 bit digital to analog converter, being used for real time sound effects and for playing back samples. The test requires an oscilloscope.

Connect the oscilloscope to audio output connector OUT 1 or OUT 2. the test will generate pulses of various amplitudes. The amplitude will be shown on the screen. If no pulses are detected, the corresponding bits indicate the errors.

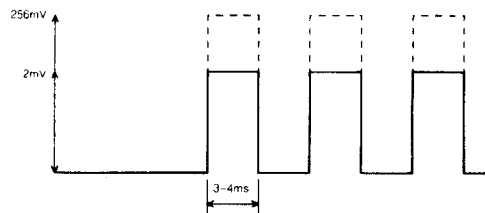

DAC TEST OUTPUT RESPONSE

Fig. 5

PRS 02536  
T02/727

following pins should show 5 V pulses:

- IC12 pin 9 for bit 0
- IC12 pin 12 for bit 1
- IC12 pin 6 for bit 2
- IC12 pin 15 for bit 3
- IC12 pin 5 for bit 4
- IC12 pin 16 for bit 5
- IC12 pin 2 for bit 6
- IC12 pin 19 for bit 7

If these pulses appear but there is no corresponding signal on the output, test if pulses appear on:

- IC15 pin 4
- IC19 pin 14

Either of these ICs may be defective.

Check for 5 V on IC10 pin 6. If pulses appear at IC17 pin 1 but not at IC17 pin 2, IC17 must be replaced.

### 4. Keyboard

The keyboard test allows to test either a keyboard or the keyboard interface. It requires a keyboard (NMS1160) or a testprint. The program will ask which device is being used.

Use of the testprint will result in an automatic test of the keyboard interface. If an error occurs, the corresponding bit will be shown on the screen.

In case of error(s) check connections to the bit indicated, being both on the connector and on IC10. IC10 may be defective. Re-RUN the test to find other defects.

Use of the keyboard returns a list of numbers representing the keys pressed.

If the program does not indicate this correctly, either the keyboard or the interface (IC10, Keyboard connector) will be defective.

## 5. Music chip

This test is being used to check the Y8950 Sound processor (IC10). There are 2 tests:

1. 9 notes test
2. Sine wave test

The 9 notes test returns 9 subsequent guitar-like sounds. If these sounds are played correctly, correct functioning of the sound processor may be concluded.

The sine wave test generates a 1kHz sine wave which can be used to check various ICs in the output circuit. The signal on pin 21 of IC10 has a 13 bit digital form and is converted to an analog signal by IC14. The analog sine wave signal is available on IC14 pin 2.

Check for 1 kHz signal on:

- IC14 pin 2
- IC19 pin 8
- IC17 pin 8
- IC19 pin 7
- IC18 pin 7
- IC17 pin 11,3
- IC19 pin 1 should show 2.5 V
- IC10 pin 10 should show 5 V

If the signal does not appear at all:

Check for 900 kHz on IC14 pin 5

Check for 50 kHz on IC14 pin 3

If signals are not present IC10 is defective.

Otherwise check if signal on IC14 pin 4 changes when sine wave is being switched on or off.

If so, IC14 is defective.

## 6. Sample

This feature will test the sample function. It samples the signal on pin 4 of IC10 and allows to check the microphone, the input circuit (IC18) and the sample memory (IC8). After sampling the test will play back automatically the sample and repeat it until a key is being pressed.

The program will ask to record a sample.

First sample through the built in microphone since this may be the cause. It is suggested, to sample a sine wave of an oscillator or a clear whistle.

If sampling through the microphone does not function correctly, try sampling through an external microphone. It may indicate errors in microphone (polarity) or diode ZD1. Look for input signal on IC18 pin 12, 14.

If signal is not O.K., check ZD1 for 6.2 V and check SKT1.

Feed a signal to the external line input. If signal on IC18 pin 1 is o.k., check IC18 pin 12, 14 and check SKT2.

If not, look for signal on IC18 pin 1,8. IC18 may be defective. VR1 may have to be recalibrated, proceed with the VR1 adjust feature.

If sampling does not work yet or sound is distorted, check the connections between IC10 and IC8. Both may be defective.

## 7. VR1-Adjust

This test allows to adjust the ADC (analog to digital converter) bias (VR1).

To use it connect a short-circuited cinch plug to the EXT. MIC. socket and set VOLUME to maximum.

Now turn potentiometer VR1 until the arrow displayed points to zero. Make sure that reading is stable.

## 8. Signals

This test generates various signals concerning the address decoding logic. It addresses the Audiochip (C0), the DAC-latch (0A) and the ACIA (00) respectively. Check for negative edge pulses on the corresponding chip select signals:

|               |  |
|---------------|--|
| C0: pulses on | IC11 pin 8<br>IC9 pin 2, 4, 6, 8, 10, 12<br>IC5 pin 7, 9, 12, 14, 16, 18 |
| 0A: pulses on | IC13 pin 8, 3<br>IC6 pin 11<br>IC16 pin 10                               |
| 00: pulses on | IC3 pin 3<br>IC6 pin 6<br>IC16 pin 10                                    |

Finally there is a BUSDIR-test:


Check for pulses on IC16 pin 4

Either of the ICs mentioned may be defective.

Note: Finding the pulses mentioned may be uneasy because of the very short duty cycles. Using a monostable multivibrator described in this manual ( Fig. 6 ) may help detecting the pulses. In order to use it, connect a probe to SIGNAL IN. The signals to be tested will respond with a lighting LED.

## 9. Start Module

Choosing this option will result in the normal Music Module operation mode.

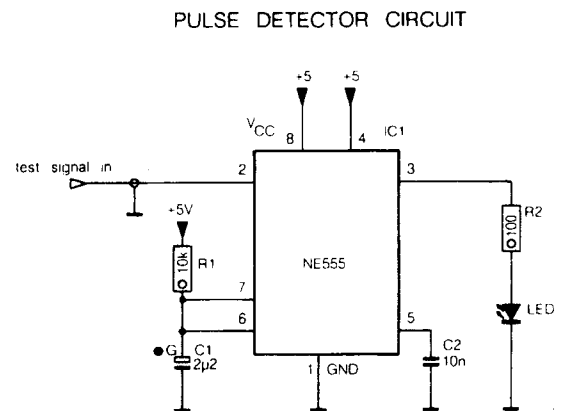

PRS 02535  
T02/727

Fig. 6

## APPENDIX A

## DIAGNOSTIC PROGRAM LISTING

```

10 KEYOFF:SCREEN 0,0,0:COLOR 15,1,1
20 CLEAR 100,&HCFFF:DEFUSR=&HD002:GOSUB 2260
30 REM Philips music module diagnostics 3.87
40 CLS:PRINT"Philips Music Module Diagnostics"
50 PRINT"=====
60 LOCATE 5,3:PRINT"1..Checksum
70 LOCATE 5,5:PRINT"2..MIDI
80 LOCATE 5,7:PRINT"3..DAC
90 LOCATE 5,9:PRINT"4..Keyboard
100 LOCATE 5,11:PRINT"5..Musicchip
110 LOCATE 5,13:PRINT"6..Sample
120 LOCATE 5,15:PRINT"7..VR1-adjust
130 LOCATE 5,17:PRINT"8..Signals
140 LOCATE 5,19:PRINT"9..Start Module
150 GOSUB 210:A=VAL(A$):IF A<1 OR A>9THEN 150
160 ON A GOSUB 260,330,540,660,1000,1570,1900,2090,2240
170 GOTO 40
180 REM subroutines
190 OUT &HC0,A:OUT &HC1,D:RETURN
200 OUT &HC0,A:D=INP(&HC1):RETURN
210 LOCATE 0,22:PRINT"Select one of above tests":GOTO 240
220 LOCATE 0,22:PRINT"Press any key to continue":GOTO 240
230 GOSUB 210
240 A$=INKEY$:IF A$="" THEN 240
250 RETURN
260 CLS:PRINT"Checksum ROM-test"
270 LOCATE 5,5:PRINT"To which slot is the musicmodule"
280 LOCATE 5,7:INPUT"connected";A
290 IF A<1 OR A>2 THEN 10
300 POKE &HD00E,A:A=USR(0)
310 LOCATE 5,9:PRINT"Checksum : ";HEX$(PEEK(&HD000)+256*PEEK(&HD001))
320 GOTO 220
330 CLS:PRINT"MIDI-tests"
340 LOCATE 5,4:PRINT"1..ACIA-test"
350 LOCATE 5,6:PRINT"2..Pulse-test"
360 GOSUB 210
370 A=VAL(A$):IF A<1 OR A>2 THEN 360
380 ON A GOTO 450,390
390 REM pulsetest
400 CLS:LOCATE 5,5:PRINT"180 uS pulse available"
410 LOCATE 0,22:PRINT"Press any key to abort
420 OUT(0),3:OUT(0),21
430 OUT(1),2:IF INKEY$="" THEN 430
440 RETURN
450 REM aciatest
460 CLS:LOCATE 5,5:PRINT"Make sure testconnections are Ok":GOSUB 220
470 LOCATE 5,7:PRINT"Testing ACIA"
480 OUT(0),3:OUT(0),21
490 FOR N=0 TO 255:OUT(1),N
500 RD=INP(5)
510 IF RD<>N THEN LOCATE 5,10:PRINT"ACIA ERROR":GOTO 220
520 NEXT
530 LOCATE 5,10:PRINT"ACIA ok":GOSUB220:RETURN
540 REM dactest
550 CLS:PRINT"DAC-test
560 LOCATE 5,5:PRINT"Make sure oscilloscope is
570 LOCATE 5,7:PRINT"connected to output
580 GOSUB 220
590 A=&H18:D=&HFF:GOSUB 190
600 A=&H19:D=&H1:GOSUB 190

```

```

610 FOR N=0 TO 7:D=2^N:LOCATE 5,9+N
620 PRINT"bit "N" output "D*2"mV"
630 OUT(10),D:OUT(10),0
640 IF INKEY$="" THEN 630
650 NEXT:RETURN
660 CLS:PRINT"keyboard-tests
670 LOCATE 5,5:PRINT"1..Connected to keyboard
680 LOCATE 5,7:PRINT"2..Connected to testprint
690 GOSUB 210:A=VAL(A$)
700 IF A<1 OR A>2 THEN 690
710 ON A GOTO 720,860
720 LOCATE 5,9:PRINT"Press one or more keys and
730 LOCATE 5,10:PRINT"check...
740 LOCATE 0,22:PRINT"Press any key to abort      "
750 LOCATE 4,12
760 FOR N=0 TO 7
770 OUT &HC0,6:OUT &HC1,2^N
780 OUT &HC0,5:RD=INP(&HC1)
790 RD=255-RD:IF RD=0 THEN 830
800 FOR K=0 TO 7
810 IF (RD AND 2^K)=2^K THEN PRINT N*8+K+1;:BEEP
820 NEXT
830 NEXT:PRINT STRING$(40," ")
840 IF INKEY$="" THEN 750
850 RETURN
860 LOCATE 5,9:PRINT"Make sure testprint is connected":GOSUB 220
870 DATA 01,F7,02,7F,04,FD,08,EF
880 DATA 10,BF,20,FB,40,FE,80,DF
890 RESTORE 870
900 FOR N=0 TO 7
910 READ D$:D=VAL("&H"+D$)
920 A=6:GOSUB 180:A=5:GOSUB 200
930 READ R$:R=VAL("&H"+R$)
940 IF R<>D THEN 980
950 NEXT
960 LOCATE 5,11:PRINT"Connector is Ok"
970 GOTO 220
980 LOCATE 5,11:PRINT"FAILURE OBSERVED BIT"N
990 GOTO 220
1000 REM musicchip
1010 CLS:PRINT"MSX Audio chip test"
1020 LOCATE 5,5:PRINT"1..9-notes-test"
1030 LOCATE 5,7:PRINT"2..Sinewave-test"
1040 GOSUB 210
1050 A=VAL(A$):IF A<1 OR A>2 THEN 1040
1060 ON A GOTO 1070,1400
1070 DATA 51,49,160,9,241,241,155,152,8,0
1080 RESTORE 1070:FOR N=0 TO 9:READ D(N):NEXT
1090 A=&H18:D=&HF:GOSUB 190
1100 A=&H19:D=&H8:GOSUB 190
1110 DATA 32,40,48,35,43,51,64,72,80,67,75,83,96,104,112
1120 DATA 99,107,115,128,136,144,131,139,147
1130 RESTORE 1110
1140 FOR N=0 TO 23:READ K
1150 FOR A=K TO K+2:D=D(INT(N/3)):GOSUB 190
1160 NEXT:NEXT
1170 D=D(8):FOR A=192 TO 200:GOSUB 190:NEXT
1180 D=D(9):A=189:GOSUB 190
1190 DATA 160,174,176,42
1200 DATA 161,174,177,46

```

```

1210 DATA 162,176,178,49
1220 DATA 163,2 ,179,50
1230 DATA 164,174,180,50
1240 DATA 165,174,181,54
1250 DATA 166,2 ,182,55
1260 DATA 167,174,183,57
1270 DATA 168,174,184,63
1280 DATA 176, 10,177,14
1290 DATA 178, 17,179,18
1300 DATA 180, 18,181,22
1310 DATA 182, 23,183,25
1320 DATA 184, 31
1330 RESTORE 1190
1340 LOCATE 4,10:FOR N=1 TO 9
1350 READ A,D:GOSUB 190:READ A,D:GOSUB 190
1360 PRINT N;:FOR T=1 TO 300:NEXT
1370 NEXT
1380 FOR N=1 TO 9:READ A,D:GOSUB 190:NEXT
1390 RETURN
1400 LOCATE 5,10:PRINT"Sinewave available"
1410 A=&H18:D=&HF:GOSUB 190
1420 A=&H19:D=&H8:GOSUB 190
1430 DATA 179,18,180,18,181,22,182,23,183,25,184,31
1440 DATA &H19, 8,&H20,33
1450 DATA &H23, 33,&H40,0
1460 DATA &H60,233,&H63,250
1470 DATA &H80, 0,&H83,0
1480 DATA &HC0, 1,&HA0,174
1490 DATA &HB0, 50
1500 RESTORE 1430:FOR N=1 TO 17:READ A,D:GOSUB 190:NEXT
1510 LOCATE 0,22:PRINT"Press any key to abort  "
1520 IF INKEY$="" THEN 1520
1530 RESTORE 1540
1540 DATA &h60,108,&h63,108,&H80,108,&h83,108,&hb0,18
1550 FOR N=1 TO 5:READ A,D:GOSUB 190:NEXT
1560 RETURN
1570 CLS:PRINT"Full memory sampling test"
1580 LOCATE 5,5:PRINT"Press any key to record sample
1590 IF INKEY$="" THEN 1590
1600 LOCATE 5,7:PRINT"Recording now
1610 REC=2700:RESTORE 1620
1620 DATA 19,00,04,FF,04,80,07,68
1630 DATA 08,00,09,00,0A,00,0B,FF
1640 DATA 0C,1F,0D,E1,0E,00,07,E8
1650 FOR N=1 TO 12
1660 READ A$:A=VAL("&H"+A$)
1670 READ D$:D=VAL("&H"+D$)
1680 GOSUB 190
1690 NEXT N
1700 FOR N=1 TO REC:NEXT
1710 A=7:D=&H68:GOSUB 190
1720 LOCATE 5,7:PRINT"Playing now  "
1730 RESTORE 1740
1740 DATA 19,08,04,FF,04,80,07,20
1750 DATA 08,00,09,00,0A,00,0B,FF
1760 DATA 0C,1F,10,EC,11,51,12,FF
1770 DATA 07,B0
1780 FOR N=1 TO 13
1790 READ A$:A=VAL("&H"+A$)
1800 READ D$:D=VAL("&H"+D$)

```



```

1810 GOSUB 190
1820 NEXT N
1830 FOR N=0 TO REC:NEXT
1840 LOCATE 5,7:PRINT"Repeating now      "
1850 LOCATE 0,22:PRINT"Press any key to abort      "
1860 IF INKEY$="" THEN 1860
1870 DATA 07;&HA1,07,&H20
1880 RESTORE 1870:READ A,D:GOSUB 190:READ A,D:GOSUB190
1890 RETURN
1900 CLS:PRINT"VR1-adjustment
1910 LOCATE 5,5:PRINT"Set volume to maximum and plug"
1920 LOCATE 5,7:PRINT"cinch plug in ext. mic."
1930 LOCATE 5,9:PRINT"Adjust VR1 to 0"
1940 LOCATE0,22:PRINT"Press any key to abort      "
1950 DATA &H0D,&HFF,&H0B,0,8,0,8,8,&H19,0,0
1960 RESTORE 1950
1970 FOR N=1 TO 5:READ A,D:GOSUB 190:NEXT
1980 LOCATE 5,11:PRINT"VR1 reading:"
1990 LOCATE 15,13:PRINT"0"
2000 LOCATE 5,14:PRINT"-----+-----"
2010 A=&H1A:GOSUB 200
2020 IF D<245 AND D>10 THEN 2010
2030 IF D>10 THEN X=D-256 ELSE X=D
2040 LOCATE 16+Y,15:PRINT" "
2050 LOCATE 16+X,15:PRINT"~"
2060 Y=X
2070 IF INKEY$="" THEN 2010
2080 RETURN
2090 CLS:PRINT"Signals test"
2100 O=&HC0:GOSUB 2140
2110 O=&HA:GOSUB 2140
2120 O=&H0:GOSUB 2140
2130 GOTO 2190
2140 LOCATE 5,5:PRINT"Now writing to:";
2150 PRINT HEX$(O);"H "
2160 LOCATE 0,22:PRINT"Press any key to continue"
2170 OUT(O),0:IF INKEY$="" THEN 2170
2180 RETURN
2190 LOCATE 5,5:PRINT"Check BUSDIR signal.      "
2200 LOCATE 11,4:PRINT"_____ "
2210 LOCATE 0,22:PRINT"Press any key to abort.      "
2220 O=INP(C0):IF INKEY$="" THEN2220
2230 RETURN
2240 CALL MUSICBOX
2250 REM loading sumcheck-routine
2260 RESTORE 2310
2270 FOR P=&HD000 TO &HD026
2280 READ D$:POKE P,VAL("&H"+D$)
2290 NEXT
2300 RETURN
2310 DATA 00,00,F3,21,00,40,DD,21
2320 DATA 00,00,E5,DD,E5,3E,02,CD
2330 DATA 0C,00,01,00,00,DD,E1,E1
2340 DATA 4F,DD,09,23,7C,FE,C0,20
2350 DATA E9,DD,22,00,D0,FB,C9

```

## LIST TESTER LISTING

```
2500 REM-----
2510 REM
2520 REM Listtester
2530 REM
2540 REM Start listtester after
2550 REM typing in the program
2560 REM by typing "run 2500"
2570 REM Refer to manual
2580 REM-----
2590 REM
2600 CLS:PRINT"LISTTEST"
2610 PRINT:PRINT"Press any key and compare..."
2620 PRINT
2630 GOSUB 5000
2640 CLS:AR=0
2650 ST=32768!
2660 PG=ST+1
2670 PN=ST+3
2680 TS=0
2685 WZ=PEEK(PG)+256*PEEK(PG+1)
2700 RG=PEEK(PN)+256*PEEK(PN+1)
2710 IF RG>2400 THEN 2900
2720 S=0
2730 FOR I=PN+2 TO WZ-1
2740 A=PEEK(I)
2750 IF A=0 THEN I=WZ
2760 IF A=143 THEN I=WZ:GOTO 2790
2770 IF A=32 THEN 2790
2780 S=(S+A) MOD 256
2790 NEXT
2800 PRINT"line: ";RG,"checksum: ";S
2810 AR=AR+1
2820 IF AR= 5 THEN AR=0:GOSUB 4900
2830 TS=TS+S
2840 PG=WZ:PN=WZ+2
2850 GOTO 2685
2900 PRINT"total: ";TS
2910 END
4900 PRINT:PRINT"any key to continue"
5000 IF INKEY$="" THEN 5000
5010 RETURN
```

LIST OF CHECKSUMS

| LINE SUM | LINE SUM | LINE SUM | LINE SUM | LINE SUM |
|----------|----------|----------|----------|----------|
| 10 210   | 20 55    | 30 0     | 40 102   | 50 117   |
| 60 219   | 70 206   | 80 118   | 90 226   | 100 87   |
| 110 23   | 120 73   | 130 140  | 140 50   | 150 109  |
| 160 197  | 170 191  | 180 0    | 190 104  | 200 104  |
| 210 193  | 220 240  | 230 109  | 240 117  | 250 142  |
| 260 188  | 270 155  | 280 100  | 290 249  | 300 152  |
| 310 119  | 320 115  | 330 49   | 340 198  | 350 196  |
| 360 109  | 370 11   | 380 241  | 390 0    | 400 67   |
| 410 192  | 420 198  | 430 185  | 440 142  | 450 0    |
| 460 91   | 470 45   | 480 198  | 490 106  | 500 123  |
| 510 174  | 520 131  | 530 219  | 540 0    | 550 65   |
| 560 69   | 570 102  | 580 119  | 590 84   | 600 85   |
| 610 49   | 620 168  | 630 243  | 640 10   | 650 75   |
| 660 61   | 670 113  | 680 16   | 690 109  | 700 163  |
| 710 216  | 720 243  | 730 168  | 740 226  | 750 52   |
| 760 193  | 770 104  | 780 104  | 790 159  | 800 190  |
| 810 54   | 820 131  | 830 41   | 840 130  | 850 142  |
| 860 173  | 870 86   | 880 108  | 890 3    | 900 193  |
| 910 75   | 920 208  | 930 117  | 940 190  | 950 131  |
| 960 132  | 970 115  | 980 210  | 990 115  | 1000 0   |
| 1010 252 | 1020 72  | 1030 254 | 1040 109 | 1050 182 |
| 1060 86  | 1070 124 | 1080 42  | 1090 84  | 1100 85  |
| 1110 109 | 1120 33  | 1130 244 | 1140 219 | 1150 229 |
| 1160 64  | 1170 223 | 1180 171 | 1190 63  | 1200 69  |
| 1210 76  | 1220 218 | 1230 61  | 1240 67  | 1250 220 |
| 1260 74  | 1270 73  | 1280 11  | 1290 26  | 1300 8   |
| 1310 11  | 1320 177 | 1330 68  | 1340 48  | 1350 203 |
| 1360 10  | 1370 131 | 1380 201 | 1390 142 | 1400 37  |
| 1410 84  | 1420 85  | 1430 118 | 1440 78  | 1450 67  |
| 1460 226 | 1470 23  | 1480 149 | 1490 245 | 1500 62  |
| 1510 226 | 1520 135 | 1530 164 | 1540 183 | 1550 197 |
| 1560 142 | 1570 245 | 1580 159 | 1590 206 | 1600 16  |
| 1610 169 | 1620 19  | 1630 24  | 1640 69  | 1650 197 |
| 1660 66  | 1670 75  | 1680 89  | 1690 209 | 1700 65  |
| 1710 41  | 1720 105 | 1730 108 | 1740 15  | 1750 24  |
| 1760 66  | 1770 137 | 1780 198 | 1790 66  | 1800 75  |
| 1810 89  | 1820 209 | 1830 64  | 1840 52  | 1850 226 |
| 1860 221 | 1870 134 | 1880 244 | 1890 142 | 1900 209 |
| 1910 207 | 1920 187 | 1930 154 | 1940 226 | 1950 59  |
| 1960 63  | 1970 197 | 1980 48  | 1990 125 | 2000 245 |
| 2010 86  | 2020 205 | 2030 73  | 2040 154 | 2050 247 |
| 2060 160 | 2070 115 | 2080 142 | 2090 63  | 2100 10  |
| 2110 84  | 2120 74  | 2130 45  | 2140 207 | 2150 146 |
| 2160 47  | 2170 199 | 2180 142 | 2190 146 | 2200 124 |
| 2210 16  | 2220 17  | 2230 142 | 2240 52  | 2250 0   |
| 2260 169 | 2270 205 | 2280 44  | 2290 131 | 2300 142 |
| 2310 3   | 2320 85  | 2330 32  | 2340 98  | 2350 206 |

total checksum: 28540